




PLACE THE BRACE WIRE AROUND THE POST. DRAW THE WIRE TAUT BY TWISTING BETWEEN EACH POST. THIS APPLIES TO ALL BRACE WIRES.

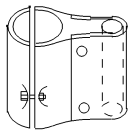


TOP HINGE

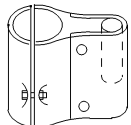


BOTTOM HINGE

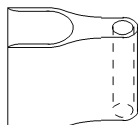

LATCH FORK

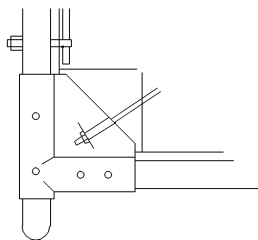


BOTTOM GATE CORNER  
AND HINGE ATTACHMENT

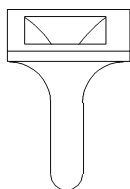


PLUNGER  
BAR CATCH


ERECT LINE BRACES BETWEEN END, CORNER OR GATE POSTS AT INTERVALS NOT EXCEEDING 324 FEET. THIS MAXIMUM INTERVAL MAY BE REDUCED BY THE ENGINEER ON CURVES WHERE THE DEGREE OF CURVATURE IS GREATER THAN 3 DEGREES. PLACE LINE BRACES AT THE END OF EACH ROLL OR PIECE OF WOVEN WIRE.

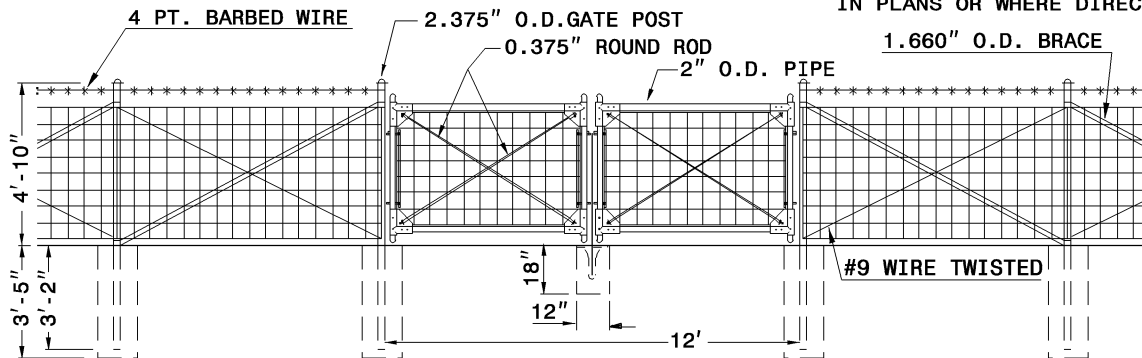

USE LATCH DEVICE APPROVED BY THE ENGINEER. HINGE ASSEMBLY, AS DETAILED, IS SUGGESTED. SUBSTITUTION MAY BE MADE SUBJECT TO THE APPROVAL OF THE ENGINEER.

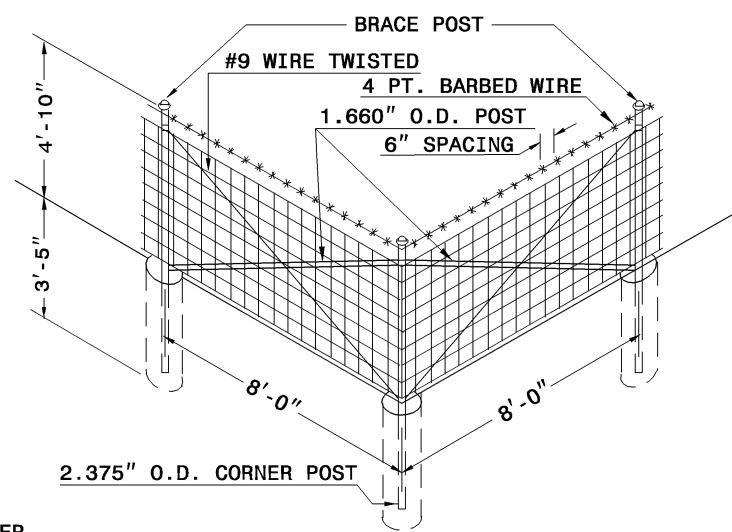

USE WHEN CORNER ANGLE IS 15° OR GREATER

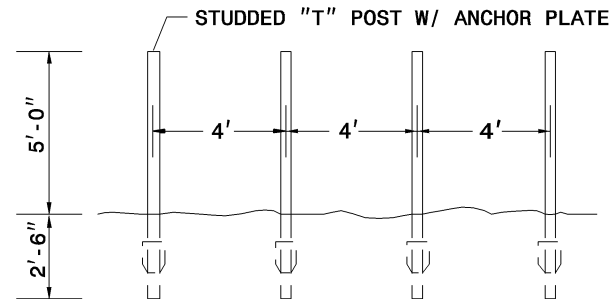

INSTALL IN ADDITION TO FENCE WHERE SHOWN IN PLANS OR WHERE DIRECTED BY THE ENGINEER